



Smart Door Lock User Manual

DL7300 PRO




Special Attention:

1. The key only helps if you keep it outside the locked door. An ideal place to store a copy is your office or nearby relative house.
2. Always use recognized brands alkaline battery for good performance and to avoid leakages. Do not use re-chargeable NiMH and NiCD battery due to the lower working voltage
3. Please study this manual carefully before installation

1. Introduction

1.1. Lock structure

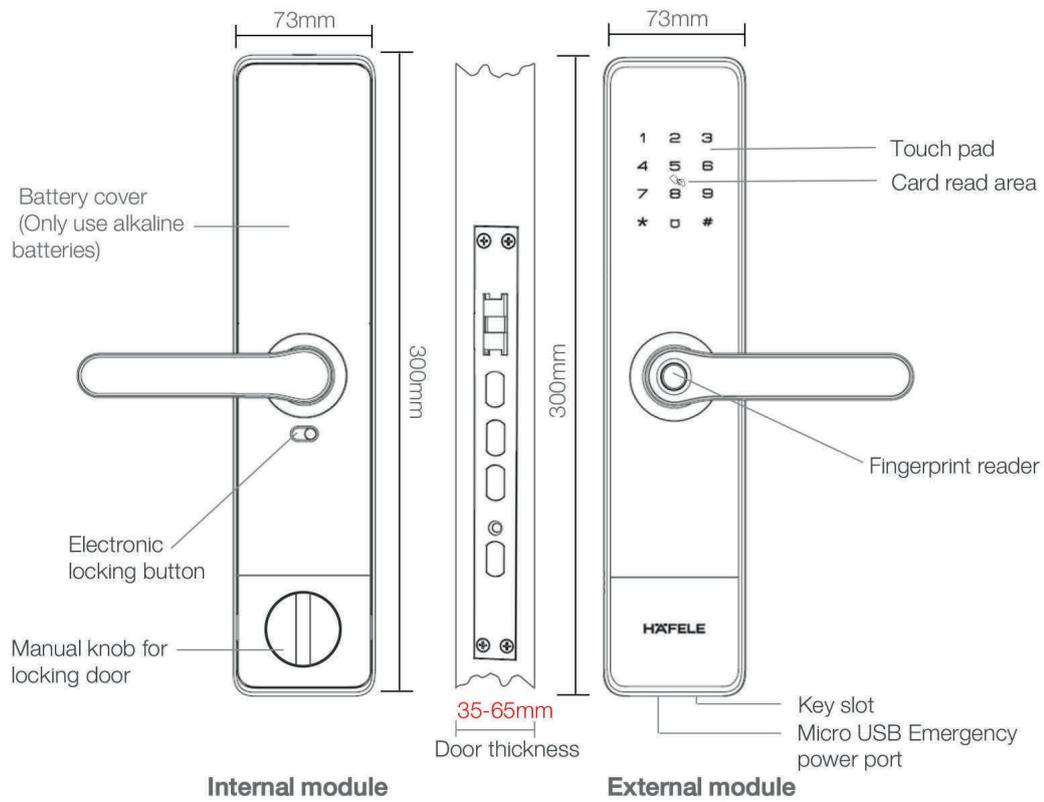

1.2. Packing List

Check the following drawing to check whether the package contains all the parts


NO	Name	Qty	NO.	Name	Qty
1	Front Panel	1	10	Mortise Screws:10*5mm (For Aluminum Door)	4
2	Back Panel	1	11	Mortise Screws:25*4mm (For Wooden Door)	5
3	Mortise	1	12	60mm Square shaft	1
4	Card	4	13	80mm Square shaft	1
5	Mechanical Key	2	14	M5*25mm Screw	1
6	Waterproof Rubber Plate	2	15	M5*40mm Screw	1
7	Screw Stubs:M5*35mm	2	16	M5*50mm Screw	1
8	Strike & Strike Box	1+1	17	U-Clip	1
9	Sliding Screws:M5*10mm	1	18	User Manual	1

1.3.Specifications


Suitable for Models	DL7300 Pro	Doors Applicable	Security door Wooden door
Materials	Aluminum alloy	Working Voltage	6V/4x AA Batteries
Lock Weight	3KG	Door Thickness	35-65mm
Unlocking Way	Bluetooth Fingerprint Password Card Mechanical key Gateway(option)	Data Capacity	Fingerprint≤50 Password≤50 Card≤50
Color	Black	Working Temperature	-10°C-55°C
Low Wottage Alarm	Less than 4.8V	Working Humidity	0-95%

1.4.System Initialization

Open the cover plate of the back panel ,long press the "Reset" button on the back panel for 5s,don't hold down the reset button until you hear a deep sound and the initialization is complete .

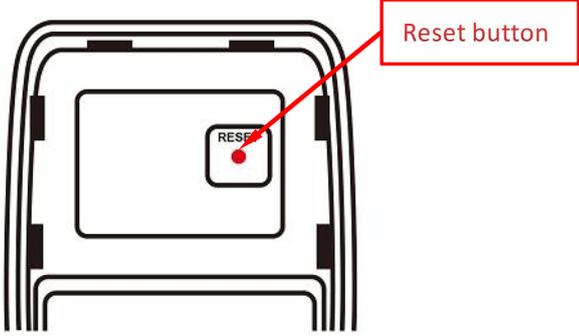

1.5.Electronic Locking Button

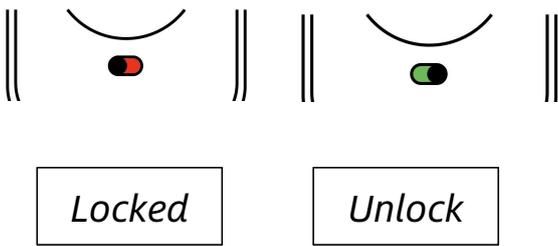


1.If you want to have the Electronic Locking function, first turn on "privacy lock" on the app
2.When the button is in the red state, it is in the locked state and can only be unlocked through the administrator app or mechanical key.

2.Installation


2.1Turn the handle

Notice: Adjust the handle according to the direction you open the door.


For Pront Panel

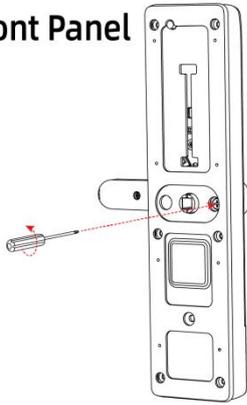

1. Loosen the screws

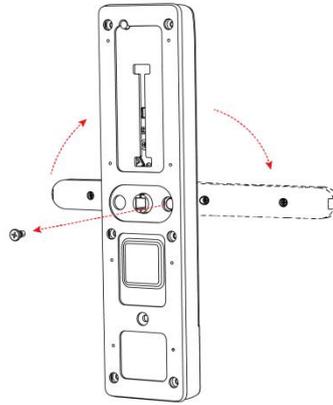


2.Left Open the Handle Toward the Left;
Right Open the Handle Toward the Right.

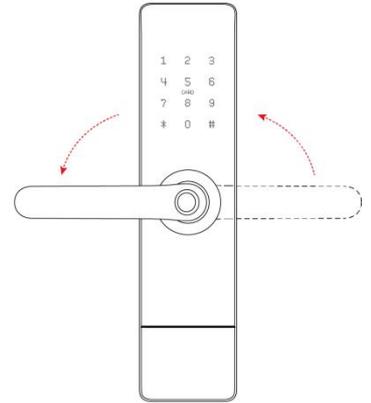


3.Reinstall the Screw After
Adjusting the Direction


For Back Panel

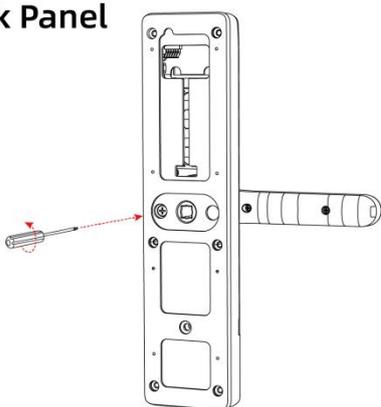

1. Loosen the screws






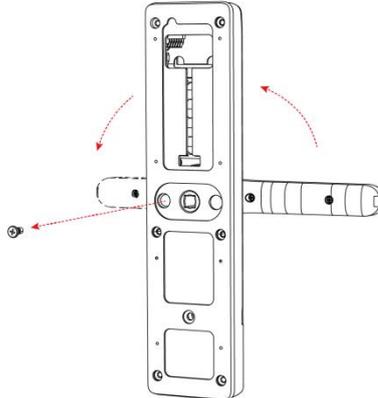


2.Left Open the Handle Toward the Right ;
Right Open the Handle Toward the Left.

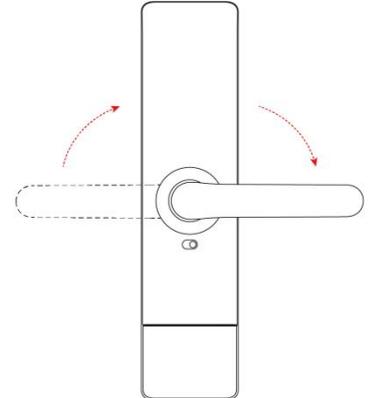

3.Reinstall the Screw After
Adjusting the Direction

2.2. Installation Diagram
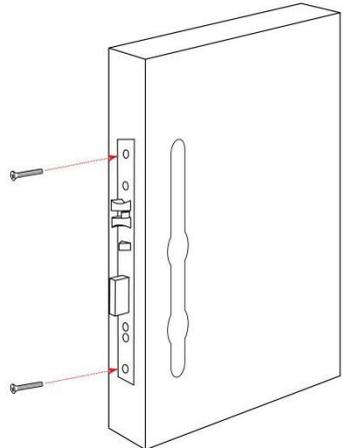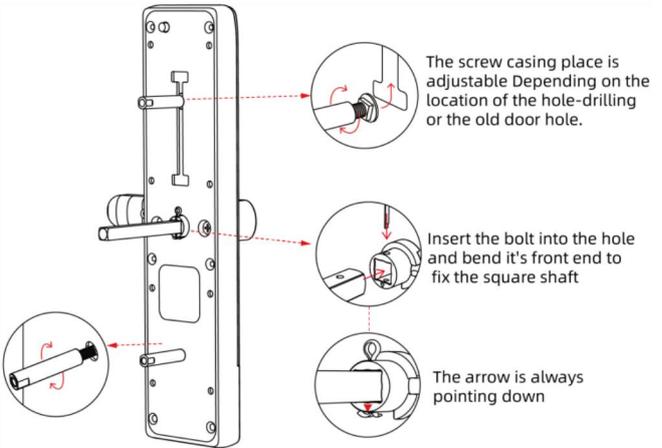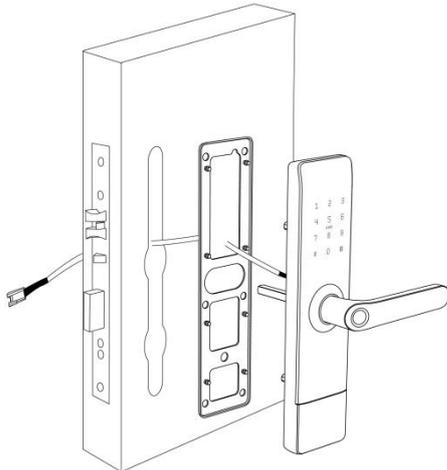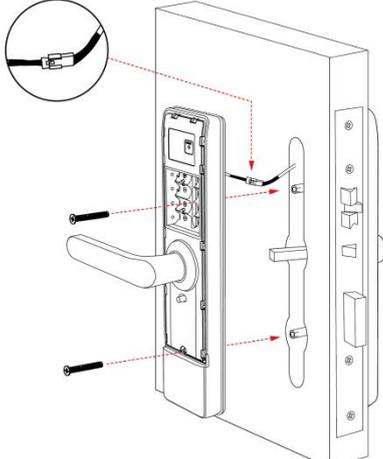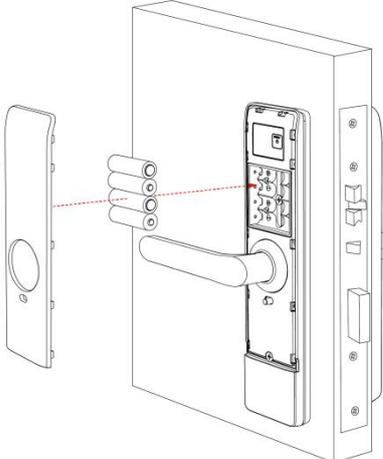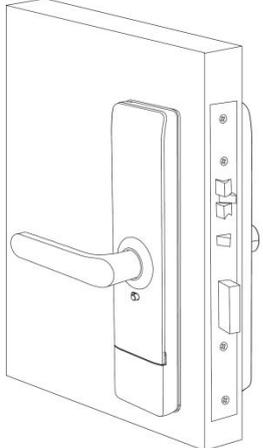
<p>Step 1 Install Mortise</p> 	<p>Step 2 Install Sliding Screw Casing</p> 
<p>Step 3 Install Back Panel and link wire</p> 	<p>Step 4 Install fixing screws</p> 
<p>Step 5 Install the battery</p> 	<p>Step 6 installation complete</p> 

3. App operation

3.1.Download


You can search for HAFELE Smart Living App in various app stores or scan the QR code above to download



**HÄFELE
SMART LIVING**



3.2.Register

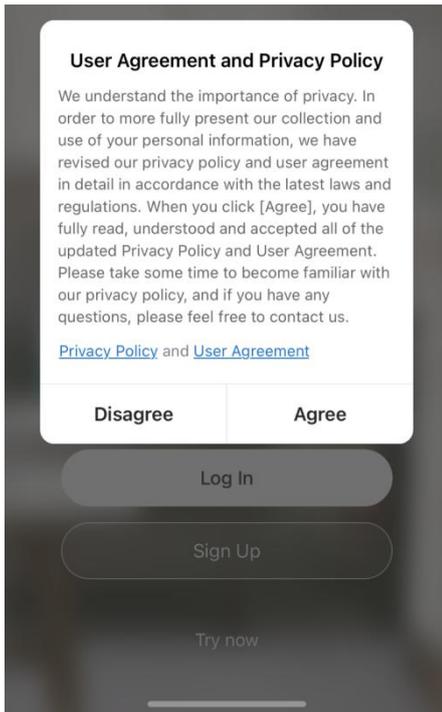

1. Click "Sign Up" and read the Privacy Policy after it pops up. Click "Agree" and enter the registration page.

2. You can use email or mobile number as your account to register. The country/region of the APP will be the same as the phone's. You can also change it by yourself when registering. (You cannot change the country/region after the registration). Enter mobile number/email and click "Get Verification Code".

3. Enter the verification code and turn to the password setting page. Set your password as required and click "Done".

3.3.Registration and Login Your Account

(1) login with an existing account

1(a). If you already have an account, choose "Register with Existing Account" and enter the login page.

The system will automatically locate the current country/region you are in. Or you can choose the country/region by yourself.

1(b). Register a new account

Register a new account with your mobile number or email.

3.4.Pair the lock

(1) Tap Add Device on the Home page or "+" in the upper right corner.


(2) Add Lock

(2a) Specific prompt from App, when you touched the screen of the lock (automatically enable pairing mode). Just click 'Add' to continue.

OR

(2b) Press 8+#, input master admin code to enable the pairing mode, once prompt, click 'Add' to continue. (make sure you have setup the master admin code before you start to press 8+#).


(3) Change lock's name & click 'Done' to completed

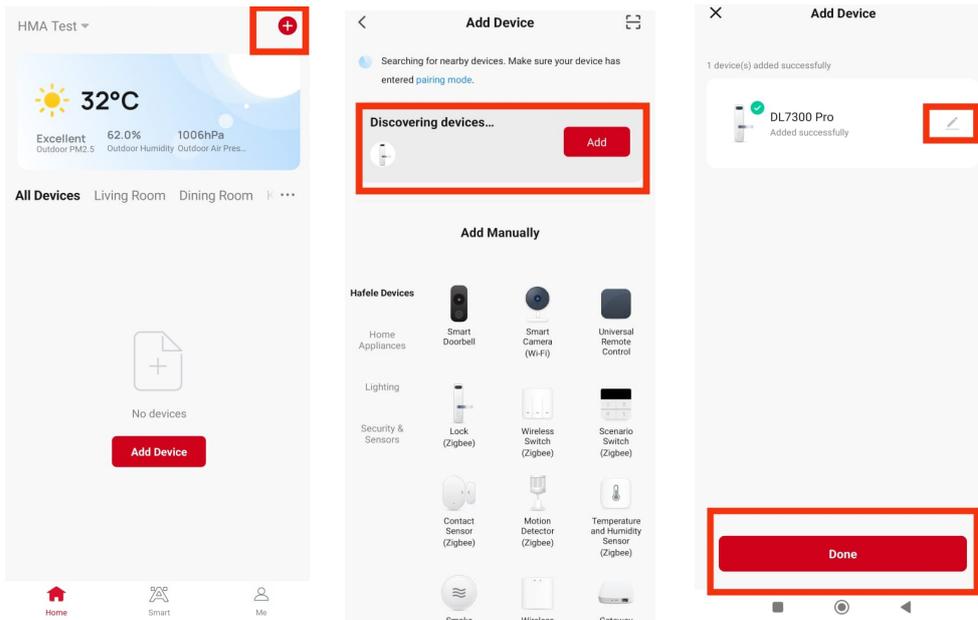

3.5. Bluetooth Unlock




Slide to the right unlock, Slide to the left lock. Make sure you are in the Bluetooth range

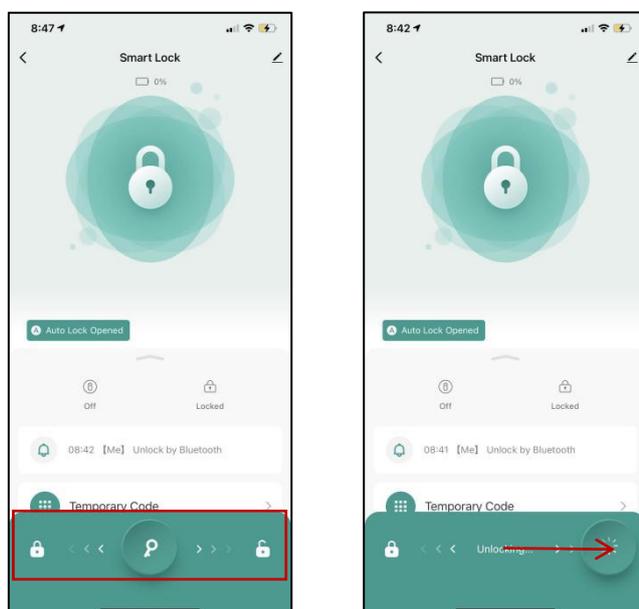

3.6. User Management

3.6.1. Add New Members


- a) Member management
- b) Click + from the top right corner
- c) Click Add

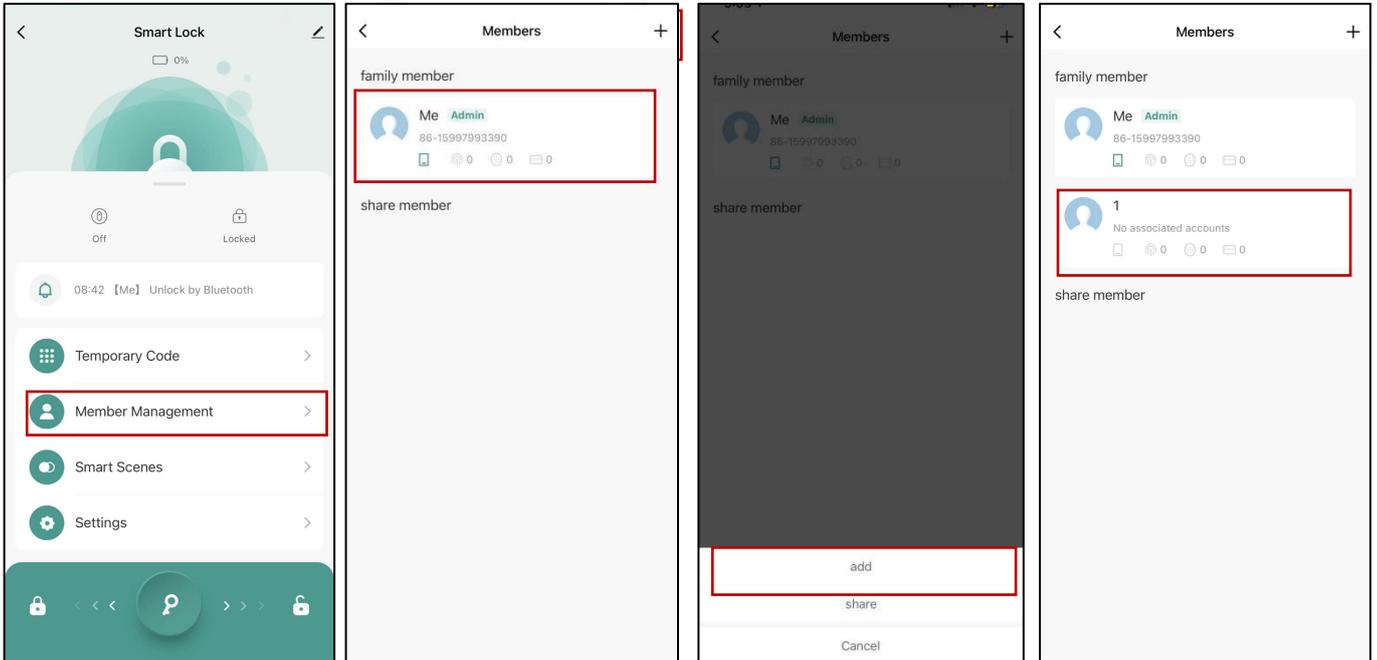

3.6.2. Add New Code


- a) Member Management
- b) Choose a member
- c) Click add & follow the instruction

Tips: Please save your password in time since it's won't show on the app

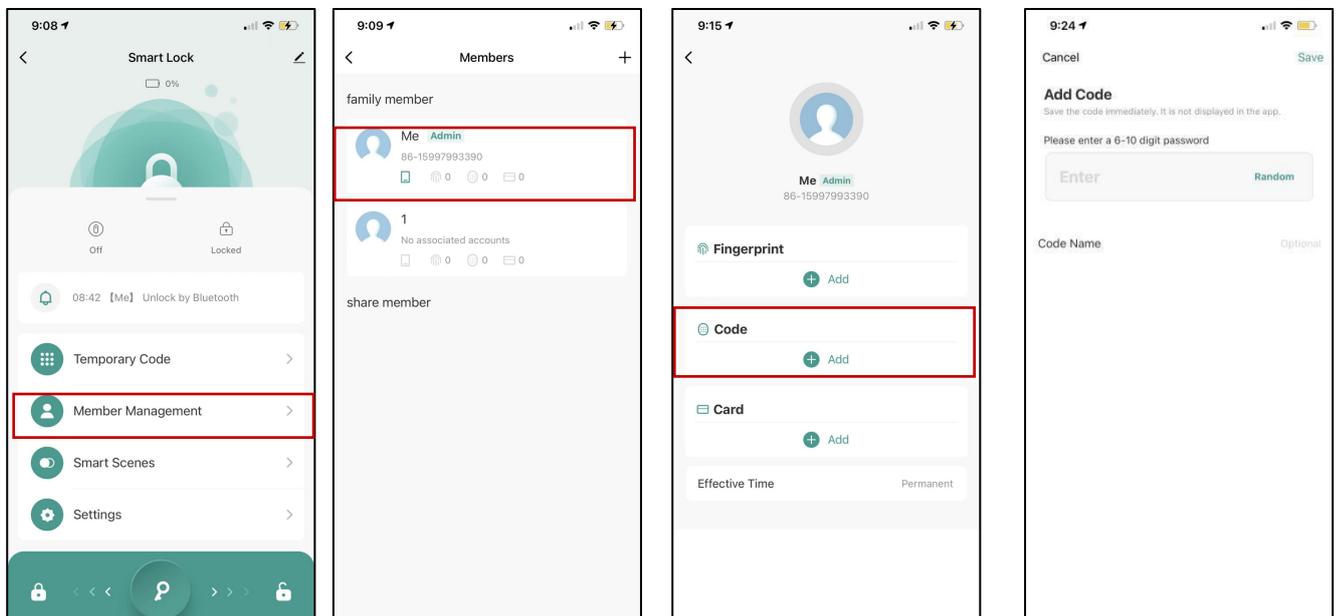

3.6.3. Add card


- Member Management
- Choose a member
- Click add & follow the instruction
- place a card to the Card Detection area.

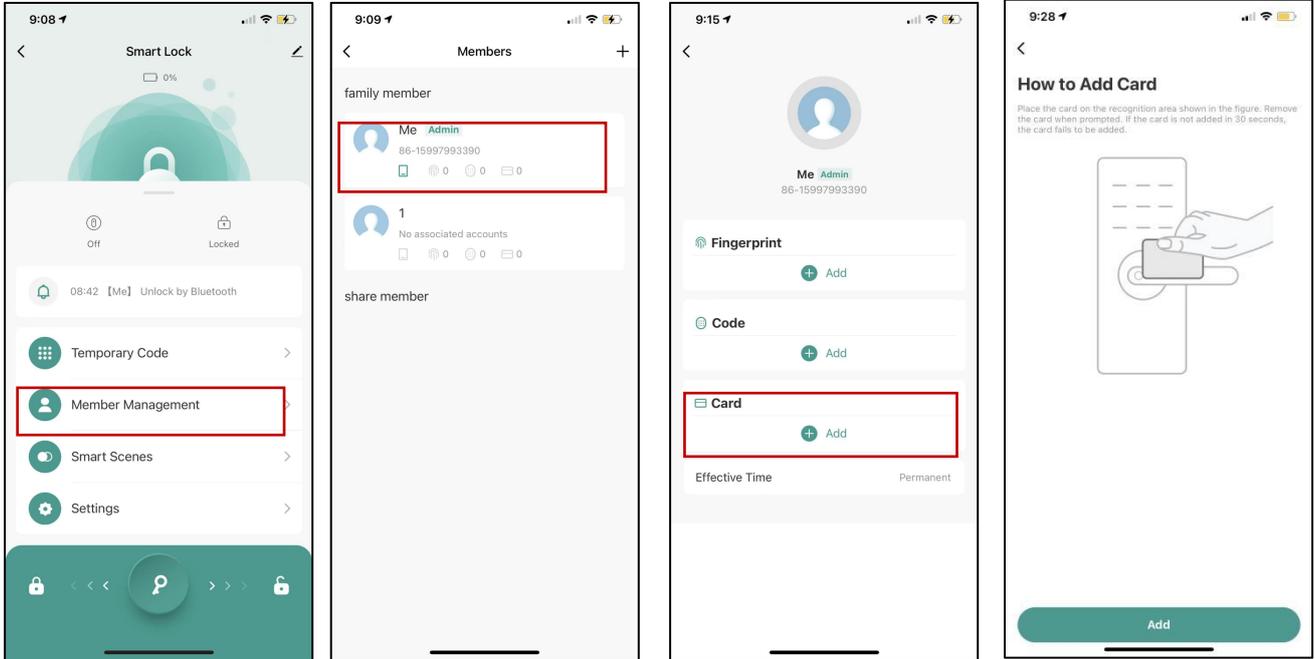

3.6.4. Add Fingerprint

- Member Management
- Choose a member
- Click add & follow the instruction
- Place your finger on the fingerprint reader as prompted by the App.

Tips: For the elderly and children or people with lighter fingerprints, create more fingerprint files and enter different angles of their fingerprints, which will help improve the fingerprints recognition rate.

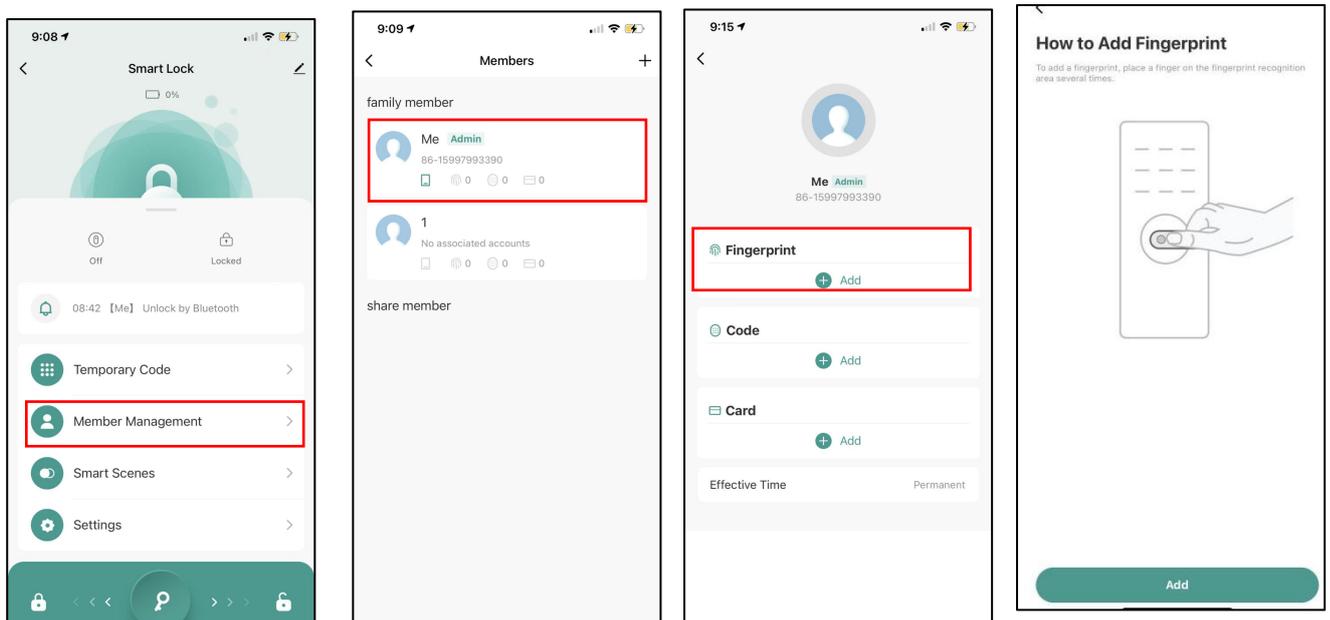


3.6.5. Authorize APP Permission

1 Choose a member you want to authorize APP permission, Click "Me" from the lower right corner of the app

2 Choose to authorize as Administrator or Common Member.

3 The authorized user needs to accept the invitation from their app.




(The members must be download the App and registered an account first).

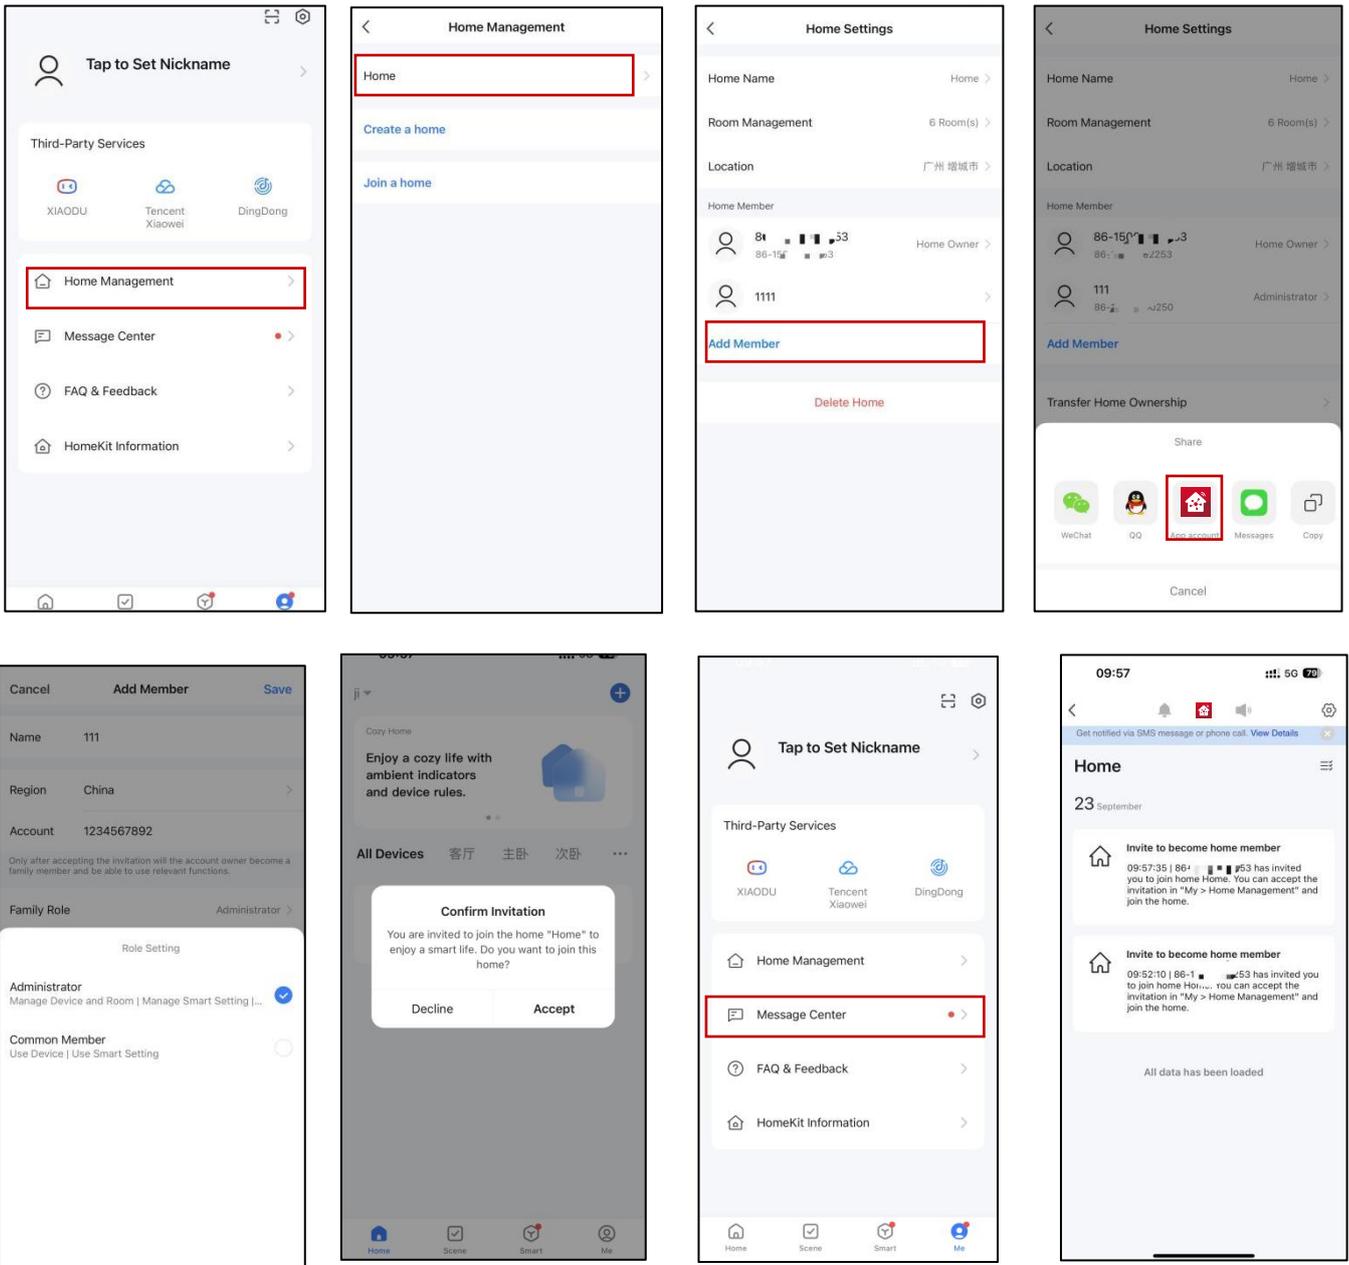

3.7. Generate Temporary code


- a) Temporary code
- b) Choose the type of password
- c) Click 'get code' to continue
- d) Share to the correct person

Notes: To protect privacy and security, the passcode will not be displayed on the app. Please save the password / share to the correct person.

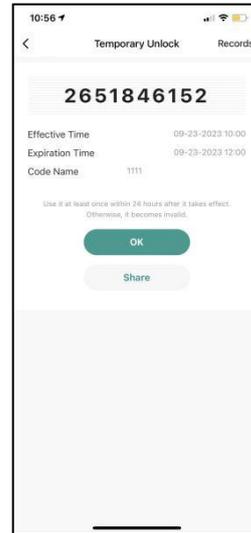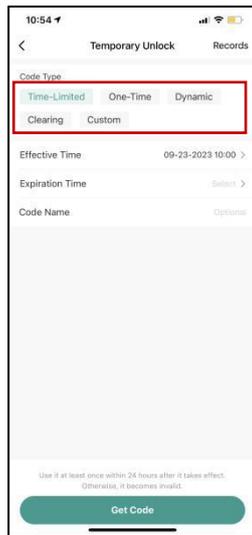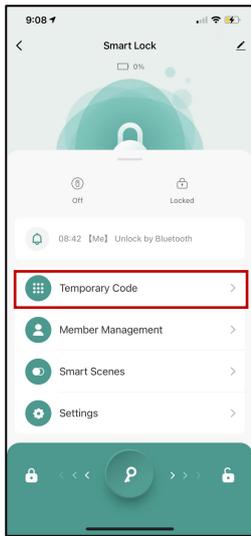

4. Setting from lock

Enter system menu: Press "*"#" on the keypad, and then input administrator information (If the administrator has not been added yet, the initial password is 123456)

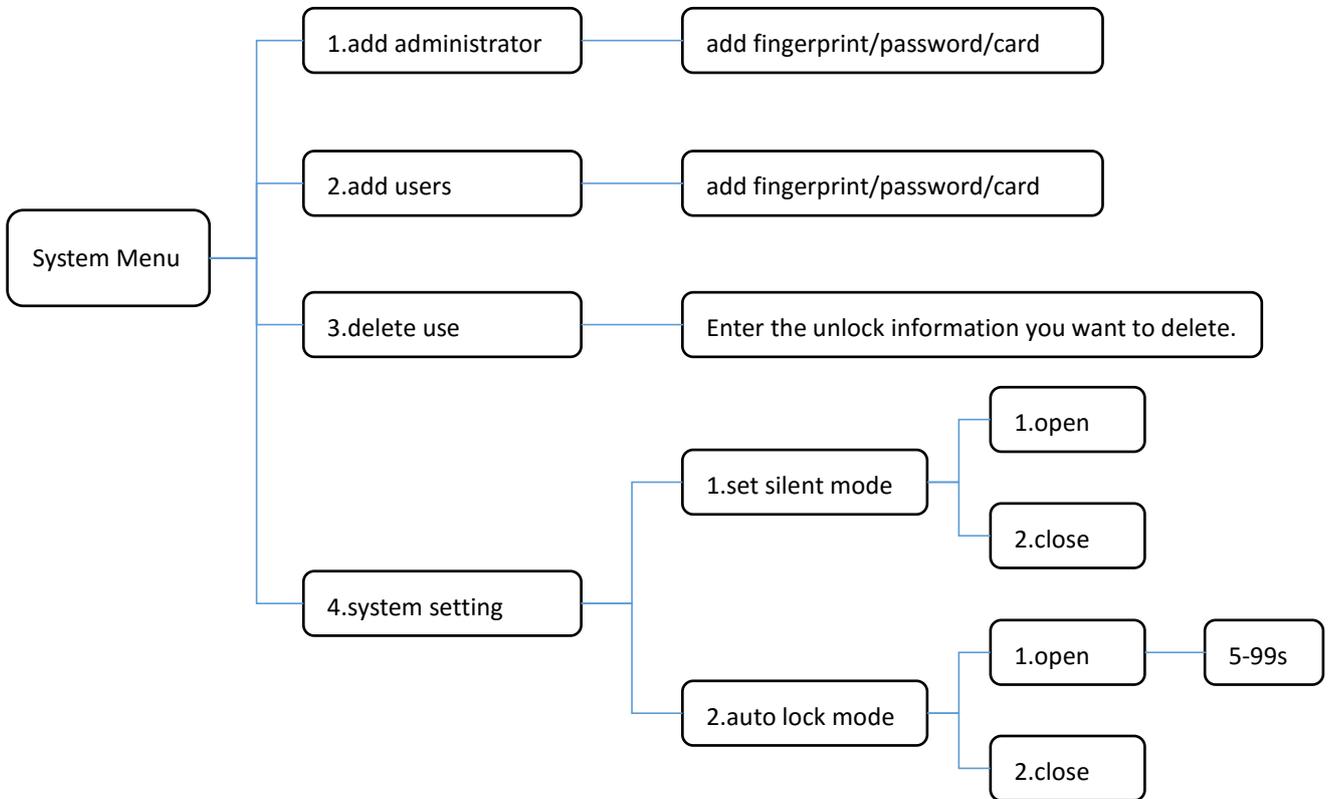

5.FAQ

<p>FDP [, Á Á^æáÁ] ^!æá } Á^& á•Ñ</p>	<p>QÁ@ÁÜ^& á•Á -Á@Á æá Á c!-æ^Æ</p>
<p>GDY @ Áæ qÁ } & Áæc!Á] ^ } c@Á æ•æ^Á [á^</p>	<p>Y[^ Á^áÁ Á^!{ { Áæ Á } & Á^!æææ } Áæ ^ Á ^c@ áÆ c@Á Á@Á æ•æ^Á [á^Á áÁæ^Á-^&É</p>
<p>HDY @æÁ Á@Á^!] [•^Á -ÁÉ d Á &</p>	<p>Y[^ Áæ Á^c@ , Á } * Á Á & Áæc!Á] & á *</p>
<p>I) Cæ!Á } •cáæá } ÉÁ ~ &Á^ } •á * Á \^ à[æáÆ &^ } Á [Á^•] [] á</p>	<p>æD QÁ c@Á &æ^Æ -á•cÁ &@& Á c@Á c@Á [•æá^Á æ áÁ } ^* æá^Á ^!&d [á^•Á [-Á c@Á àæc!^Á c@Á^Á à^ } Á á•cá^á^•] •æ^Áá[, } ÉÁ , @c@!Ác@Áàæc!^Á c@Á ^ } [^* @Á [, ^! àD Ü^ { [ç^Ác@Áæá Á æ^!Áæ áÁ^!Áæc!Á } } ^&c^áÉ &DV [Á^!á á æ^Ác@Áæ [ç^Á•æ æá } ÉÁ^ [^ } ^áá d Á !^ { [ç^Ác@Á [& ÁÆ@& Á , @c@!Ác@Á , á^•Á [-Ác@Á & Á [á^ Áæ^Á ~ ^: ^áÆá áÁc@Á^É á^É</p>
<p>I) Wj æá^Á Á^* á c!Áá *^!] á c</p>	<p>Ô@& Ác@Áá *^!•Á ÁááÁ Á ^æÉ&@& Ác@Áá *^!] á c @æá } Ác@Á & Á ÁááÁ áÁ áÁæá •ÉÁcÉ Ô@& Á Á^ÁÁc@Áá *^!] á c Á [á * Á [] ^! Q!^••Á Á •^ÁÁc@!^Á Áæ^Á^•] [] á•É</p>
<p>I) Y @æÁ Ác@Á^æ [] Á @Ác@Á { æcÁ & Á } • { ^•Áæc!Á [, ^!Ñ</p>	<p>æD Šæ^Áæ áà^ Á [, ^!Á } • { [] c àD Ü@!c&æ & æ</p>
<p>I) V@!^Á Á [Á^•] [] •^Á Á ^••á * Á c@Ác@ á^Á } Á ~ c æ^Ác@Á [Éá áÁ c@!^Á Á] & Á [{ æ^Á } Á •æ^Ác@Á á [ÉÁ^ c@Á^!æææ } Á Á [{ æÉ æ áÁc@Á [d Á Á [{ æÉ</p>	<p>QÁ æ Á^Ác@Ááæ * Ááá&cá } Á } Ác@Á & @Á æ Á !!! ÉÁ] ^æ^Á&@& Á ^&cá } É</p>
<p>I) P [, Á æ^Áá ^•Á áÁc@Á] æ• , [áÁ^Á & ^áNP [, Á] * Á á Á & ^áÑ</p>	<p>Ò) c!Ác@Á [] * Á æ• , [áÁ [^Ác@Á Á Áá ^•Á ÁÁ [, ÉÁc@Á \^ à[æáÁ Á & ^áÁ ÁÉÁ^& } á•</p>